

Manufacturer: Shenzhen Eleaf Electronics Co., Ltd. Address: Area B, 1-2F, B-28, Heyi Beifang Tech Industrial Park, Shajing Town, Baoan District, Shenzhen. China.

Email:info@eleafworld.com Web:www.eleafworld.com



Notice for Use

Thank you for choosing Eleaf products! Please read this manual carefully before use so as to use correctly. If you require additional information or have questions about the product or its use, please consult your local agents, or visit our website at www.eleafworld.com.



How to Use?

Power on/off: push forward to open the battery cover, put two high-rate 18650 batteries in correct way into the device and finally close the battery cover. The device can be powered on or off by pressing the fire button 5 times. The battery levels of battery 1 and battery 2 are respectively displayed on the screen.



- 1. Please be careful not to use batteries with torn casing as it is a safety hazard.
 2. Please make sure you are using high-rate 18650 batteries whose continuous discharge current should be above 25A.
- Before using, please set the wattage within a proper range that the atomizer you installed can ork with.

Vaping: when the device is powered on, long press the fire button to take a puff.

Stealth on/off: press the fire button and "-" end of the adjustment button simultaneously when the device is powered on to switch between Stealth On and Stealth Off mode. In Stealth On mode, you can vape with the OLED screen off and you can press the fire button once to see current setting.

Adjustment button lock/unlock: keep pressing "+" end and "-" end of the adjustment button simultaneously for two seconds when the device is powered on, then the adjustment button will be locked and the screen will display "Key Lock". In the same way, the adjustment button can be unlocked and the screen will display "Key Unlock". Through this operation, you can protect the buttons from unintentional presses and prolong their lifespan.

Switch display mode: keep pressing "+" end and "-" end simultaneously for two seconds when the device is powered off, the screen display will rotate 180 degrees. You can view the screen from two different angles through this operation.

Switch display interfaces: in power-on state, choose VW mode; keep holding "+" end and fire button till the current interface flashes; when it's flashing, press "+" or "-" end to switch among different interfaces; finally press fire button once to confirm the interface you chose. Note: the interface can only be changed and selected under VW mode in power-on state. And when one interface is selected under VW mode, the interfaces of TC (Ni, Ti, SS, M1, M2, M3) modes will

1 iKonn 220 English

change accordingly and automatically

Preheat function: in power-off state, keep holding "+" end and fire button till the M1 mode appears; press the fire button 3 times to "Power", and press "+" or "-" end to adjust the wattage of preheat; press the fire button again to "Time", and press "+" or "-" end to adjust the second of preheat or to turn off the preheat function.

Function of charging cell phone: screw an RC adapter (not included) on the device and connect it with a cell phone by a USB cable. When the device is powered on, press the fire button once to start to charge the cell phone.

Function of charging other e-cigarette mod: screw an RC adapter (not included) on the device and connect it with another e-cigarette mod by a USB cable. In power-off state, keep holding "+" end and fire button till the M1 mode appears; press the fire button 5 times to "USB" interface, and press "+" or "-" end to turn on or off this function. When the "USB" is turned on, 5 clicks of the fire button to power on the device, and in USB Charge mode, press fire button once to start to charge other e-cigarette mod.

Switch vaping modes: when the device is powered on, press the fire button 3 times in quick succession, the device will display current vaping mode. Press the "+" or "-" end to switch among VW, USB Charge (this mode appears only when "USB" is on), TC-Ni, TC-Ti, TC-SS, TCR-M1, TCR-M2, TCR-M3 modes and then press the fire button once or stay in the interface for about 10 seconds to confirm the vaping mode you chose.

1) VW mode: When set in VW mode, the device can support a coil whose resistance is within the range of

Adjust wattage: in this mode, the output wattage can be adjusted from 1W to 220W by pressing "+"

increase or decrease the wattage level.

2) TC-Ni/TC-Ti/TC-SS/TCR(M1, M2, M3) Mode:
When set in TC-Ni/TC-Ti/TC-SS mode, the device can separately support Nickel 200, Titanium, and
Stainless Steel 316 coils. In TCR (Temperature Coefficient of Resistance) mode, the device can
support different temperature control coils within different TCR value ranges and you can set the
TCR at different values within proper range. (Resistance range of coil: 0.05ohm-1.5ohm)

end or "-" end, "+" end to increase and "-" end to decrease. Long press "+" or "-" end can rapidly

The Setting of TCR Mode (M1,M2,M3): when the device is powered off, keep pressing the fire button and the "+" end simultaneously, then you will enter into the TCR (M1,M2,M3) set menu:

1. Press the fire button to choose among M1, M2 and M3 modes;

2. Press the "+" or "-" end to increase or decrease the TCR value according to the material of the

- 3. Keep pressing the fire button or stay in the interface for about 10 seconds to confirm your setting.

Following are different TCR value ranges for different coils for your reference:

Material	Nickel	Titanium	NiFe	SS(303,304,316,317)
TCR Value Range	600-700	300-400	300-400	80-200

Note: 1. The TCR value in the sheet is 10⁵ multiplied of the actual TCR. 2. Our total range of TCR value is 1-1000.

Adjust wattage: in TC-Ni/TC-Ti/TC-SS/TCR(M1,M2,M3) mode, the output wattage can be adjusted from 1W to 220W. Press the fire button 4 times in quick succession to enter the wattage setting menu and press "+" or "-" end to increase or decrease the wattage level. Keep pressing "+" or "-" end

3 iKonn 220 English

How to put custom logo in the device?

Download the file on our official website, plug the device in with USB cable to a computer, and double click the EleafUpdate.exe. Then click "LOGO" and open the image you choose to put it in the device. Finally press the fire button twice in quick succession when the device is powered on to enter logo on/off interface and press "+" end or "-" end once to turn on/off logo. Note:

1. Please make sure the image you choose is a monochrome image of 96*32 pixels in the format of

bmp.

2. If you fail to put the custom logo in and the device shuts down, press the "-" end once to restart the device.

Functions of Micro USB Port
Charging:
The battery power indicator on the screen of the device will keep flashing when the remaining power of the 18650 batteries is less than 10%.
The 18650 batteries can be charged in the device through USB port via wall adapter or a computer or charged with an external battery charger. If the 18650 batteries are charged in the device, the battery bars on the screen will keep flashing during charging and the screen will go out when fully charged.

Firmware Upgrading: The firmware can be upgraded by connecting the device with a computer through the USB port via a

micro USB cable.

Atomizer Protection: each time when vaping time exceeds 10 seconds, the output shuts off automatically with "Over 10s" display on the screen.

Atomizer Low Alert: when the resistance of coil is lower than 0.10hm in VW mode or lower than 0.050hm in TC modes, the screen will display "Atomizer Low".

Atomizer Short-circuit & No Atomizer Protection: when atomizer short-circuit occurs, the screen will display "Atomizer Short". The screen will display "No Atomizer" when there is no atomizer connected.

connected.

Low-voltage Protection: when the voltage of the batteries is below 3.3V, the screen will first display "Battery Low" and then "Lock". Charge the batteries to unlock the device.

Temperature Protection: in TC modes, when the actual temperature of coil reaches the set temperature, the screen will display "Temp Protection". You can continue to use the device normally.

Temperature Alert: if the temperature of device is over alert temperature, the output will shut off automatically and the screen will display "Device Too Hot". You can continue to vape after it cools down.

down.

Wask Battery Alert: in all vaping modes, when the device is working with an atomizer and the voltage of the batteries drops below 2.9V, the screen will display "Weak Battery". Meanwhile, the output power will be reduced accordingly.

Imbalanced Alert: if the voltage difference between two batteries is equal to or more than 0.3V, the device will display "Imbalanced Batteries" when plugged in. Please fully charge the batteries externally or replace the cells with freshly charged cells.

Check Battery Alert: if the cells are installed incorrectly, the screen will display "Check Battery".

Charge Error Alert: when no current is detected in charging state, the screen will display "Charge Error".

5 iKonn 220 English

Warranty
We are not responsible for any damages caused by human error. Legal warranty is applied.

2. This product is not recommended for use by young people, non-smokers, pregnant or breast-feeding women, or persons who are allergic/sensitive to nicotine.

Contra-indication

1. Do not attempt to repair the product by yourself as damage or personal injury may occur.

2. Do not leave the product in high temperature or damp conditions, otherwise it may be damaged.

3. Do not use this product for other purposes except only for vaping and don't swallow the e-liquid.

Possible Adverse Effects

1. This product may be hazardous to health and contains nicotine which is addictive.
2. For people with adverse reaction after using this product, it is recommended to use the e-liquid with lower nicotine content or no nicotine.

7 iKonn 220 | English

English iKonn 220 6

English | iKonn 220 4