



 
USER MANUAL

 
CONGRATULATIONS ON PURCHASING YOUR TOTALLY WICKED SKOPE P ELECTRONIC CIGARETTE KIT

USING YOUR SKOPE P

Filling the Cartridge

Remove the cartridge by pulling straight out of the Skope P. Locate the rubber flap on the side of the cartridge, and lift the edge marked with an arrow symbol. With the filling hole now exposed, insert your e-liquid bottle nozzle fully, and fill to leave a minimum air gap of approximately 2mm. Close the filling point and reinsert the cartridge firmly into the Skope P.





Note: After filling a new cartridge, it is recommended to wait 5 minutes to ensure the atomizer head is fully saturated.

Vaping:

Simply inhale gently on the cartridge mouthpiece of the Skope P and it will begin to produce vapour. The LED in the centre of the device will illuminate while the device is activated

Battery Level Indication:

Approximately one second after you finish inhaling, the LED will relight to show the battery's approximate remaining charge as detailed in the table opposite.

Battery Percentage	LED Condition
100-50%	Stays green
49-20%	Stays red
19-1%	Flashes red

Charging the Battery

To charge the battery, connect the USB cable into the charging port on the side of the Skope P. The LED will glow until fully charged, at which point it will turn off.

Changing the Cartridge

The Skope P cartridge will require renewal periodically, and we recommend it is changed for a new one after each 20-30ml of e-liquid consumed.

Short Circuit Protection

If a short circuit occurs before you inhale on the Skope P, the LED will flash continuously. Changing the cartridge should allow normal operation to resume. Follow the steps outlined in *Changing the Cartridge* above.

Atomizer Protection

If the Skope P is operated continuously for longer than 10 seconds the device will stop producing any vapour and the LED will flash once. Normal operation should resume on the next attempted use.

Kit Contents

1 x Skope P battery 2 x Skope P cartridges 1 x USB Cable 1 x User Manual

Specifications

Dimensions: 90.0mm (length) x 29.0mm (width) x 12.0mm (depth) Battery capacity: 480mAh Weight: 57.5g Tank capacity: 2ml Output modes: Regulated constant voltage – automatic switch Max charging current: 1.0A Airflow type: Non-adjustable Filling method: Side fill Atomizer Resistance Capability: 0.8ohm – 3.0ohm Maximum Filling Nozzle Diameter: 3mm

Manufactured in China under the authority of Pillbox38 UK Ltd, Stancliffe Street, Blackburn, Lancashire, BB2 2QR.

ADDITIONAL PRODUCT INFORMATION

There are no reported medical side effects with this product. If you believe you experience a side effect, please contact the manufacturer.

PRODUCT STORAGE AND BATTERY PRECAUTIONS

- Store the Skope P and its accessories away from children when not in use.
- Please only use the charging cable provided.
- Please dispose of dead batteries in accordance with your country's appropriate legislation.
- Do not charge the battery in a damp environment, or in temperatures under 0°C or above 45°C.
- Do not use the device in temperatures under -10°C or above 60°C.
- Do not carry batteries in a pocket or bag with other metallic objects.
- Do not attempt to repair a faulty Skope P battery as these are sealed units with no serviceable parts. Attempted repairs will void the warranty.

WARRANTY

The Skope P components have a 28-day parts warranty, with the exception of cartridges, which are consumable items and covered by "dead on arrival" warranty only. The USB cable supplied has a 12-month warranty. If any parts are found to be faulty within this time please contact our customer service team, whose details are below and we will arrange for a replacement. We may require the goods to be returned for further investigation.

