



TOTALLY wicked®

arc


pico
baby



USER MANUAL

CONGRATULATIONS
ON PURCHASING YOUR
**TOTALLY WICKED
ARC PICO BABY
ELECTRONIC
CIGARETTE KIT.**

THE TOTALLY WICKED ARC PICO BABY

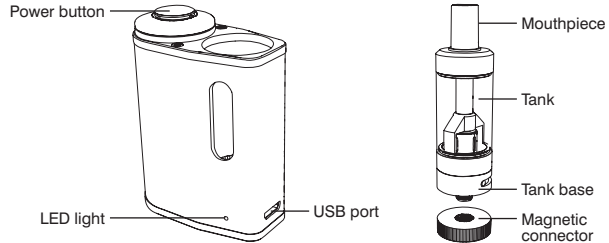



PRIMING THE ATOMIZER HEAD


Note: It is important to “prime” a new atomizer head before first use. Failure to do so can cause the atomizer coil to overheat, leading to an unpleasant taste and sometimes irreversible damage to the atomizer head.

Remove the CS Air Baby tank from the arc Pico Baby by pulling straight out, and unscrew the magnetic connector from the tank base. Invert the CS Air Baby tank and unscrew the base. Drip a few drops of e-liquid on each of the four e-liquid inlets

on the side of the atomizer head, and into its central hole to fully wet the wicking material.

Note: After priming a new atomizer head and filling the tank, it is recommended to wait 5 minutes to ensure the atomizer head is fully saturated.


PRIMING THE ATOMIZER HEAD

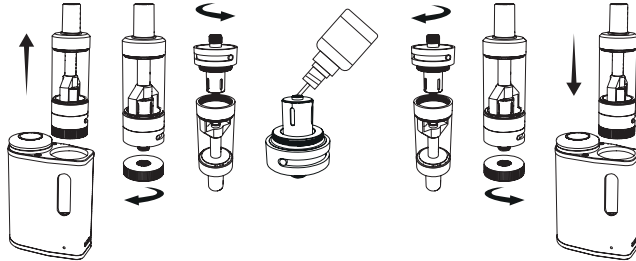



FILLING THE TANK


With the tank base removed and the tank inverted, fill the CS Air Baby tank through one of the openings either side of the central air hole, to a maximum level of just below the height of the central air hole. Avoid allowing liquid into the central air hole. Once filled, screw the base back onto the tank, screw the magnetic connector back onto the tank base, and slide the tank back into the arc Pico Baby body.

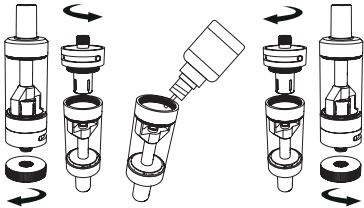

USING YOUR ARC PICO BABY

Power On and Off

The switch lock needs to be fully disengaged to switch the arc Pico Baby on or off. To do this, turn the power button outer ring anti-clockwise until at its highest position. Press the power button 5 times quickly to turn the arc Pico Baby on. To turn the device off, press the power button 5 times. Turn the power button outer ring fully clockwise to engage the switch lock.

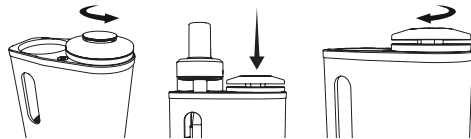



USING YOUR ARC PICO BABY

Vaping

Press and hold the power button as you inhale the vapour. The LED will illuminate while the power button is held down to vape.

Battery level indication

Approximately one second after the power button is released, the LED will relight to show the battery's approximate remaining charge as detailed in the table opposite.

Battery Level	Light Condition
100%-60%	Stays lit for 5 seconds
59%-30%	Flashes once every 3 seconds, 4 times
29%-10%	Flashes once every 1 second, 4 times
9-0%	Flashes rapidly 4 times


USING YOUR ARC PICO BABY

Charging the battery

To charge the battery, connect the charge lead into the USB port. The LED on the side of the arc Pico Baby will glow red and simultaneously flash 5 times in white when the charge lead is first connected. Once charging, the LED will continue to glow red until fully charged, at which point it will turn off.

Adjustment of airflow


To adjust the airflow to your personal preference, remove the CS Air Baby tank from the device and turn the adjustment ring. The more area exposed behind the slots in the airflow ring, the more open the air draw will be.

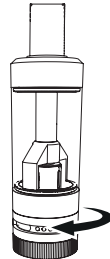



CHANGING THE ATOMIZER HEAD

To change the atomizer head in the CS Air Baby tank, unscrew the magnetic connector from the tank base. Invert the tank and unscrew the base. Remove the atomizer head from the base by unscrewing, and insert a new atomizer head. After fitting a new atomizer head, remember that it will need priming as described in the section “*Priming the Atomizer Head*”

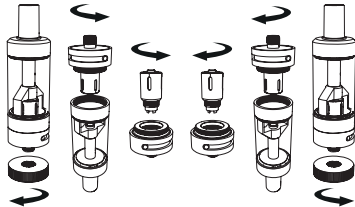

USING YOUR ARC PICO BABY

Short Circuit Protection

If a short circuit occurs before the power button is pressed, the LED will flash 5 times consecutively. If a short circuit occurs while the power button is pressed, the LED will flash 3 times consecutively. Replacing the atomizer head should allow normal operation to resume. Follow the steps outlined in *Changing the Atomizer Head*.

Atomizer Protection

If the power button is held down for longer than 15 seconds, the device will stop producing any vapour and the power LED will flash 10 times. After releasing the power button normal operation will resume.

Low Voltage Protection

If the battery voltage drops below 3.3V, the LED will flash 20 times and the device will power off. Charge the device via USB to power it back on.





KIT CONTENTS

- 1 x arc Pico Baby
- 1 x CS Air Baby tank
- 1 x CS 1.5ohm atomizer head (fitted)
- 1 x CS 0.75ohm atomizer head (spare)
- 1 x Magnetic connector
- 1 x USB cable
- 1 x User manual
- 1 x Spare parts kit

SPECIFICATIONS

- Dimensions:** 41mm x 23mm x 75mm
- Battery capacity:** 1050mAh
- Tank capacity:** 2ml
- Voltage Output:** 3.3V - 4.2V (Direct)
- Battery Voltage:** 3.7V (Nominal)
- Tank diameter:** 16.5mm
- Atomizer Resistance Capability:**
0.4ohm - 3.0ohm
- Power Output:** Atomizer head resistance
dependent, maximum 25 watts
- Maximum Filling Nozzle Diameter:**
3.8mm

PRODUCT STORAGE AND BATTERY PRECAUTIONS

- Store the arc Pico Baby and its accessories away from children when not in use.
- Ensure the arc Pico Baby is powered off when not in use.
- Avoid accidentally pressing the arc Pico Baby power button when not in use.
- Please only use the charging cable provided.
- Please dispose of dead batteries in accordance with your country's appropriate legislation.
- Do not charge the batteries in a damp environment.
- Do not use the device when temperatures are outside the range -10 - 60°C.
- Do not charge the battery when temperatures are outside the range 0 - 45°C.
- Do not attempt to repair a faulty arc Pico Baby as these are sealed units with no serviceable parts. Attempted repairs will void the warranty.





WARRANTY

The arc Pico Baby components have a 28-day parts warranty, with the exception of Atomizer Heads, which are consumable items and covered by “dead on arrival” warranty only. The USB cable supplied has a 12-month warranty. If any parts are found to be faulty within this time please contact our customer service team, whose details are on the back page of this booklet and we will arrange for a replacement. We may require the goods to be returned for further investigation.

Additional product information

There are no reported medical side effects with this product. If you believe you experience a side effect, please contact the manufacturer.



PiLLbOX 38

arc 

Manufactured in China
under the authority
of Pillbox38 UK Ltd,
Stancliffe Street,
Blackburn, Lancashire,
BB2 2QR.



Tel 01254 692244
www.totallywicked.co.uk



Tel 1(888) 761-9425
www.totallywicked.com



Tel 0941-78447082
www.totallywicked.de